

How to find Mac Address:

Follow the instructions below to find the Mac Address of your device. A Mac Address will have a twelve-digit code, followed by either hyphens or colons (ex. 00-12-AB-3C-45-6D or 00:12:AB:3C:45:6D).

Important Note: Gaming devices that have the ability to use a wired connection (plugged into the wall), will be required to use that functionality. Please be sure to send us the **WIRED MAC** address off these devices highlighted in red.

Sony Consoles

Playstation 3 (Wired MAC required)

To locate the MAC Address of your Playstation 3:

1. From the main menu, select Settings
2. Select System Settings
3. Select System Information
4. The MAC Address will be displayed on the screen

Playstation 4 (Wired MAC required)

To locate MAC Address of your Playstation 4:

1. From the main menu, go up and then left until you have reached Settings
2. Select network Settings
3. Select View Connection Status
4. The MAC Address will be displayed on the screen

PSP

To locate MAC Address of your PSP:

1. Go to System Settings
2. Go to System Information
3. The MAC Address will be displayed on the screen

PS Vita

To locate MAC Address of your PS Vita:

1. From the Main Menu, select Settings

2. Scroll down to System option
3. Select System Information option
4. The MAC Address will be displayed

Microsoft

Windows 7, 8, 8.1, and 10

To locate MAC Address of your windows operating system:

1. Go to the start menu
2. Type CMD
3. Type ipconfig /all
4. Copy the “Physical Address” (MAC Address) from the “Ethernet adapter Wireless Network Connection”
5. The MAC Address will be displayed

Windows 10 exclusively

To locate MAC Address of your windows 10 system:

1. Go to start menu
2. Type CMD
3. Type in ipconfig /all
4. Find your adapter’s physical address
5. Right-click on your network connection and select “Status”

Xbox 360 (Wired MAC required)

To locate MAC Address of your Xbox 360:

1. From the main menu, go to my Xbox
2. Select System Settings
3. Select network Settings
4. Select configure Network
5. Select Additional Settings
6. Select Advanced Settings
7. The MAC Address will be displayed

Xbox 1 (Wired MAC required)

To locate MAC Address of your Xbox 1:

1. From the main menu, go to My Games and Apps
2. Select Settings
3. Select Network
4. Select Advanced Settings
5. The MAC Address will be displayed

Amazon

Amazon Fire Stick

To locate MAC Address of your Fire Stick:

1. Select Settings
2. Select System
3. Select About
4. Select Network
5. The MAC Address will be displayed

Amazon Echo

To locate MAC Address of your Echo:

1. From the main menu, select Menu
2. Select Settings
3. Your MAC Address will be under Wi-Fi Address located in the Device Info section

Amazon Dot

To locate MAC Address of your Dot:

1. From the main menu, select Menu
2. Select Settings
3. Your MAC Address will be under Wi-Fi Address located in the Device Info section

Amazon Alexa

To locate MAC Address of your Alexa:

1. From the main menu, select Menu
2. Select Settings

3. Your MAC Address will be under Wi-Fi Address located in the Device Info section

Amazon Kindle Fire

To locate MAC Address of your Kindle Fire:

1. From the main menu, Select Settings
2. Go to Wireless under Device header
3. Select Wi-Fi
4. The MAC Address will be displayed

Barnes & Noble

Nook

To locate MAC Address of your Nook:

1. On the Home screen click on the Menu
2. Select Settings
3. Under Device info you will find the Wi-Fi MAC Address

Nintendo

Nintendo DS

To locate MAC Address of your DS:

1. Go to the Nintendo Wi-Fi Connection Setup in the game's menu
2. Select Options and System Information
3. The MAC Address is displayed on the top line

Nintendo 3DS

To locate MAC Address of your 3DS:

1. From the main menu, select System Settings
2. Select Internal Settings
3. Select Other Information
4. Select confirm Mac Address
5. The MAC Address will be displayed

Nintendo switch

To locate MAC Address of your switch:

1. From the main menu, select System Settings
2. From that menu, select Internet
3. The MAC Address will be displayed under System MAC Address

Wii U (Wired MAC required)

To locate MAC Address of your Wii U:

1. From the main menu, select System Settings
2. Select the internet icon
3. Select MAC Address
4. The MAC Address will be displayed

Apple

Macbook

To locate MAC Address of your Macbook:

1. Click the Apple Logo, and Navigate to System Preferences
2. Select Network
3. Select Advanced
4. Select the "Hardware" Tab
5. The MAC address will be displayed

iPAD

To locate MAC Address of your IPAD:

1. Select Settings
2. Select General
3. Select About
4. The MAC Address will be displayed as Wi-Fi Address

iPOD TOUCH

To locate MAC Address of your IPOD TOUCH:

1. Select Settings
2. Select General
3. Select About
4. The MAC Address will be displayed as Wi-Fi Address

Apple TV (Wired MAC required)

To locate MAC Address of your Apple TV:

1. On the remote select Settings
2. Select General
3. Select Network
4. The Mac Address will be displayed as either Wi-Fi Address or Ethernet Address. Depends if the Apple TV is connected by Wi-Fi or Wired Connection

Google

Google home

To locate MAC Address of your Google Home:

1. Download the Home app on a device
2. Select device
3. Select Settings
4. Select Information
5. The MAC Address will be displayed

Other Devices

Roku (Wired MAC required)

To locate MAC Address of your Roku:

1. From the main menu, select Settings
2. Go to Network

3. Select the wired or wireless connection. The wired MAC address will be listed as either Ethernet Address or Wired MAC Address

Smart TV (Wired MAC required)

To locate Mac Address of your Smart TV:

Most Mac Addresses will be found in the Settings Menu, either under the Network or about sections